




For borehole preparation and adhesive injection refer to the „Instructions for Use“ delivered with Hilti HIT RE 500 V4.

Für die Vorbereitung des Bohrloches und der Injektion des Injektionsmörtels, sehen Sie bitte in der Hilti HIT-RE 500 V4 Setzanweisung nach.

| 1 | | | |
|-----------------|--------|---------------|--|
| HAS-U (A4/HCR) | HIW-SD | HIT RE 500 V4 | |
| HAS (A4/HCR) | | | |
| HPA-C (A4/HCR) | | | |
| HIT-C (-R/-HCR) | | | |
| HIT-C (-R/-HCR) | | | |

| 2 | HIT RE 500 V4 d_{cut} |
|-----|-------------------------|
| M12 | 18mm |
| M16 | 22mm |
| M20 | 26mm |
| M24 | 32mm |

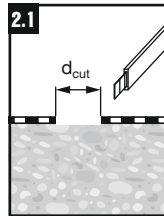

| 3 | HIT RE 500 V4 d_0 |
|-----|---------------------|
| M12 | 14mm |
| M16 | 18mm |
| M20 | 22mm |
| M24 | 28mm |

